



Reticle 
Catalogue

Thermal Imaging Riflescope

TALION XQ35 PRO

Non-scalable reticles

The values of the non-scalable reticles are correct in the following cases:

- when the magnification of the scope is set to minimum
- when "picture in picture" is activated



D50i



C50i



X54i



H50i



X50i



T54



M58i



X51Fi-300



M56Fi (Mil-Dot)




M57Fi (Mil-Dot)

Scalable reticles

Reticle parameters apply to all magnifications

D50i

Reticle parameters
(for minimum magnification)

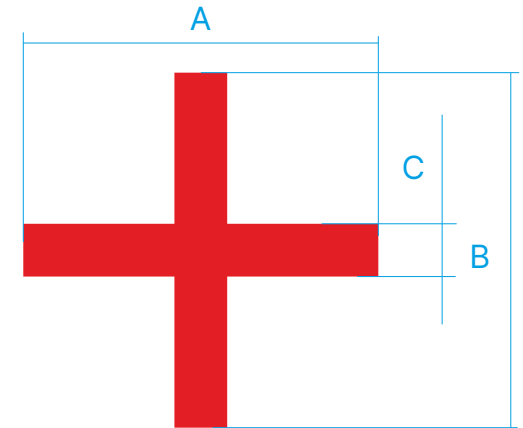



	MOA	cm @ 100 m
Section A	4.4	12.8
Section B	4.4	12.8
Section C	0.6	1.7

Thermal Imaging Riflescope

TALION XQ35 PRO

C50i

Reticle parameters
(for minimum magnification)

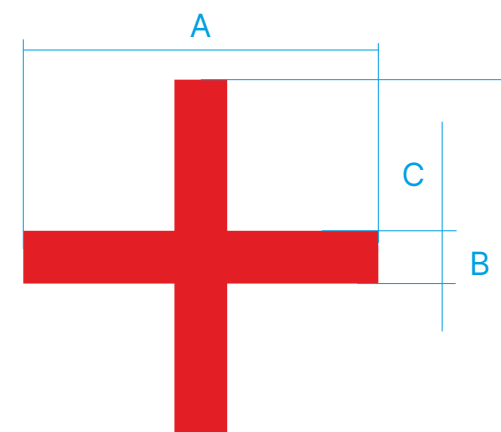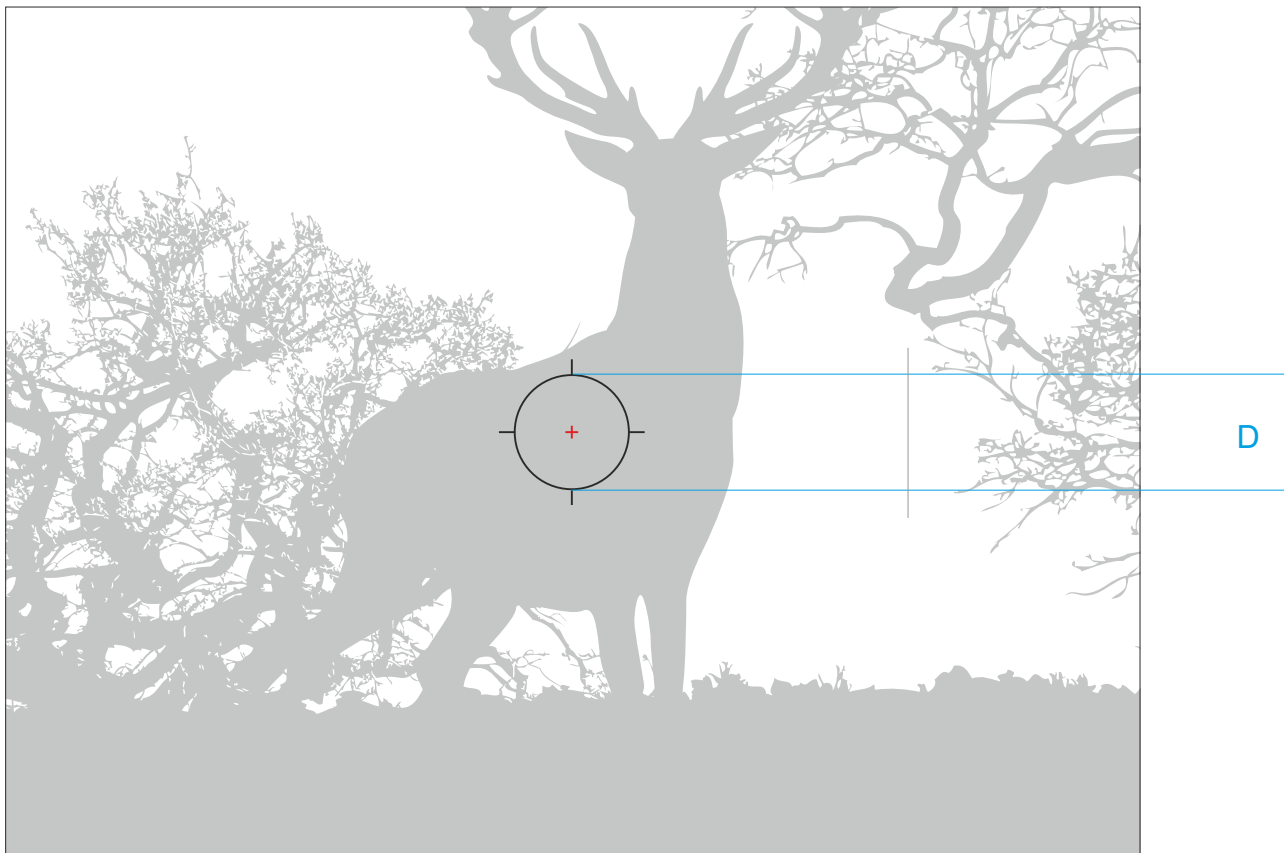

	MOA	cm @ 100 m
Section A	4.4	12.8
Section B	4.4	12.8
Section C	0.6	1.7
Section D	34.4	100



Thermal Imaging Riflescope

TALION XQ35 PRO

[↑ TO CONTENT](#)

X54i

Reticle parameters
(for minimum magnification)

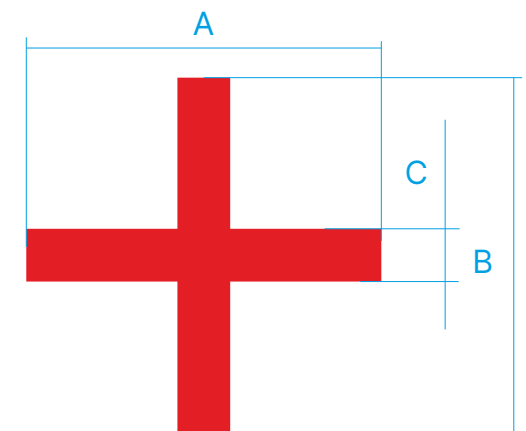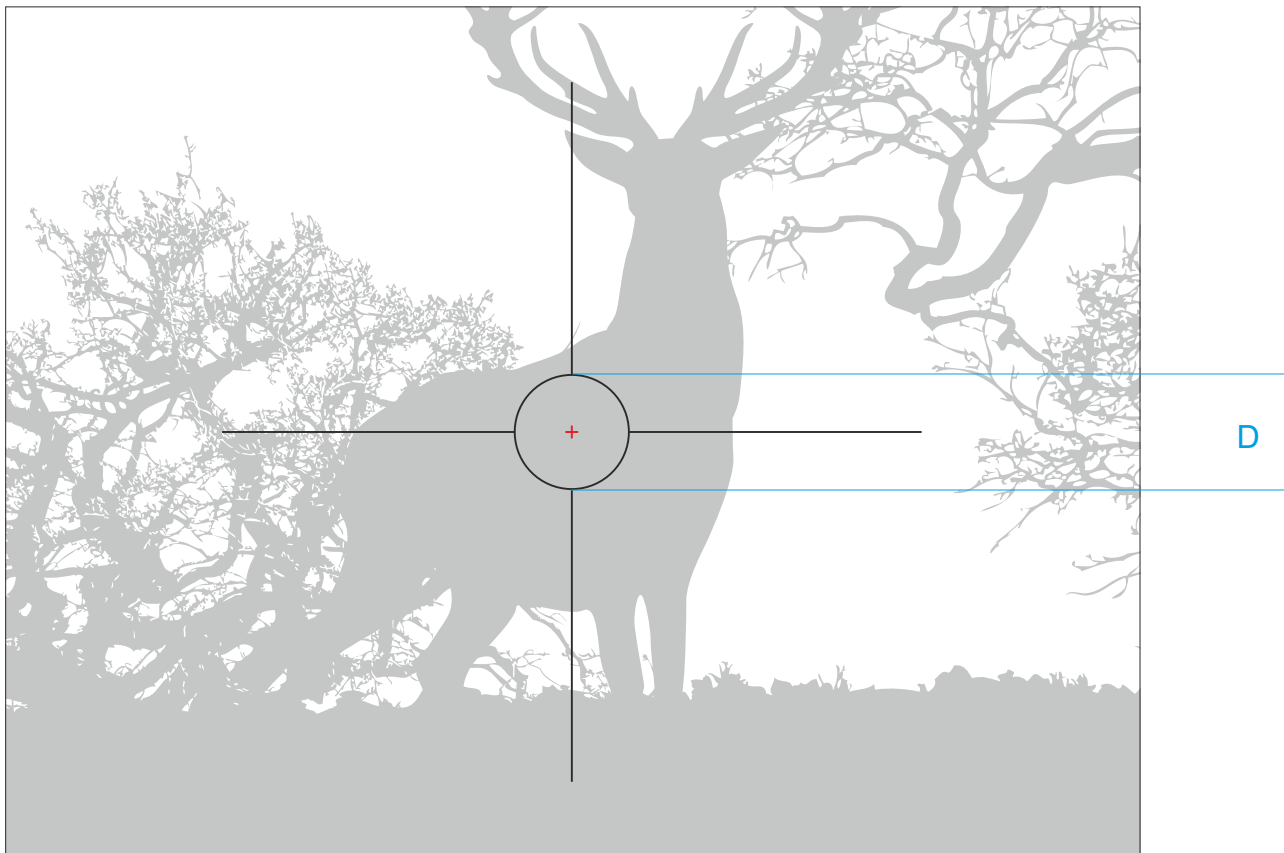


	MOA	cm @ 100 m
Section A	4.4	12.8
Section B	4.4	12.8
Section C	0.6	1.7
Section D	34.4	100

Thermal Imaging Riflescope


TALION XQ35 PRO

[↑ TO CONTENT](#)

H50i

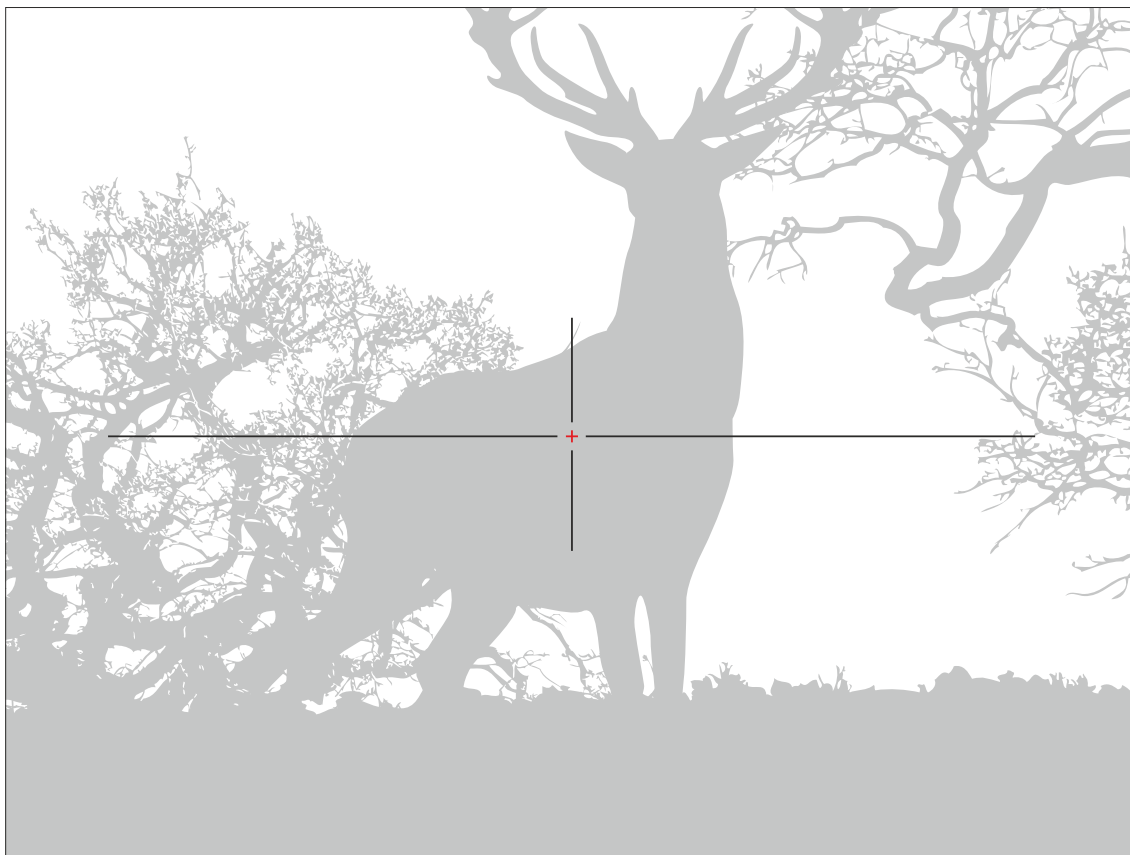

Reticle parameters
(for minimum magnification)

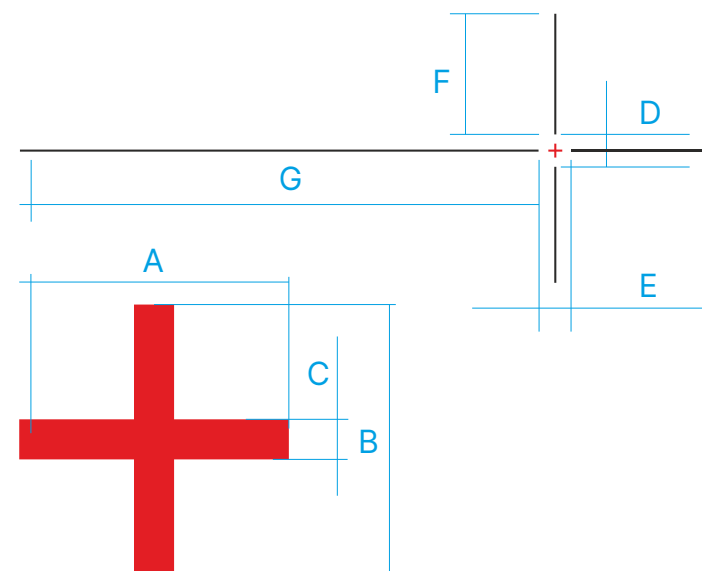


	MOA	cm @ 100 m
Section A	4.4	12.8
Section B	4.4	12.8
Section C	0.6	1.7
Section D	20	58
Section E	20	58
Section F	53	154
Section G	187	544


Thermal Imaging Riflescope

TALION XQ35 PRO

X50i

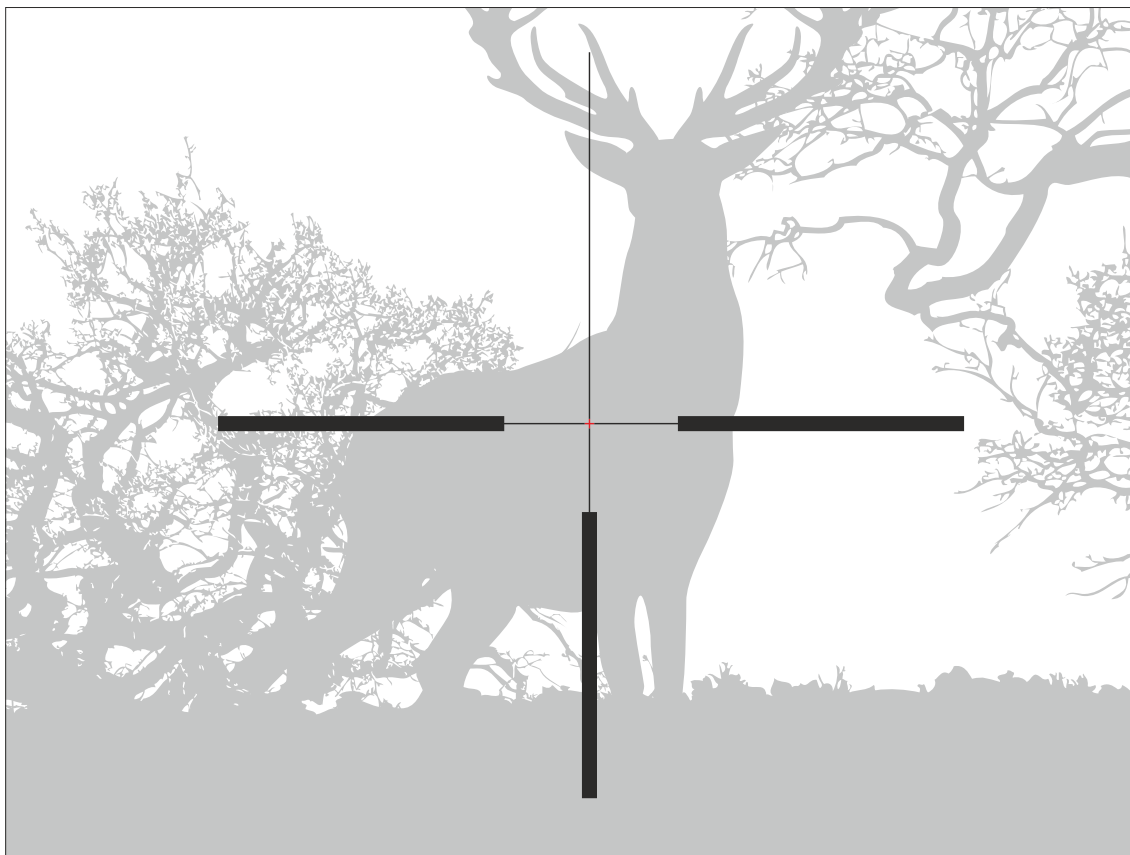

Reticle parameters
(for minimum magnification)

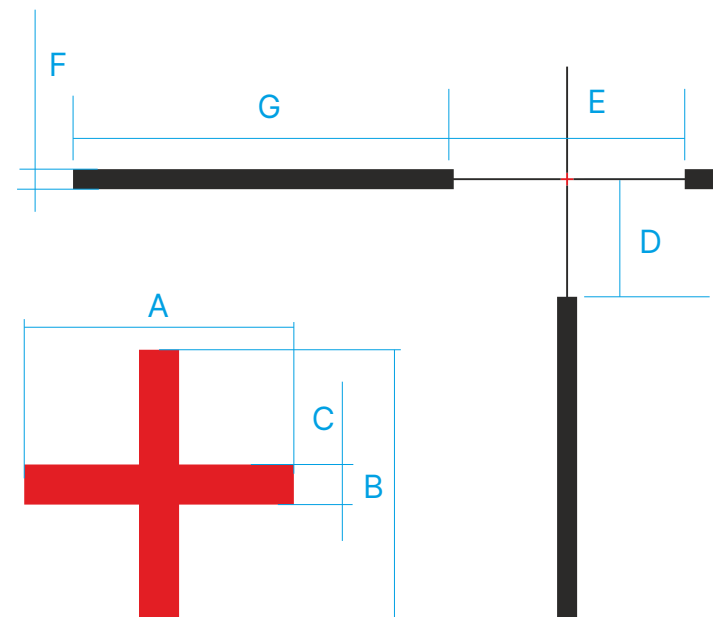

	MOA	cm @ 100 m
Section A	4.4	12.8
Section B	4.4	12.8
Section C	0.6	1.7
Section D	17.2	50
Section E	34.4	100
Section F	1.8	5.2
Section G	179.8	523

Thermal Imaging Riflescope


TALION XQ35 PRO

↑ TO CONTENT

T54



Reticle parameters
(for minimum magnification)

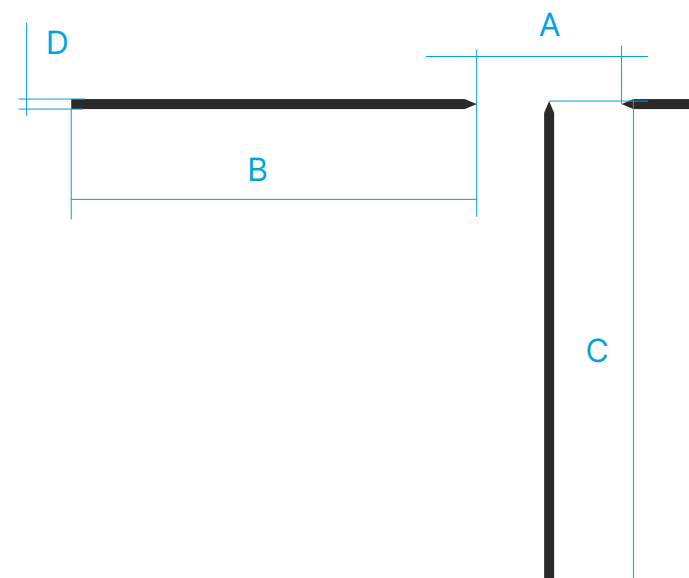

	MOA	cm @ 100 m
Section A	34.4	100
Section B	179.8	523
Section C	197	574
Section D	4.4	12.8



Thermal Imaging Riflescope

TALION XQ35 PRO

[↑ TO CONTENT](#)

M58i

Reticle parameters

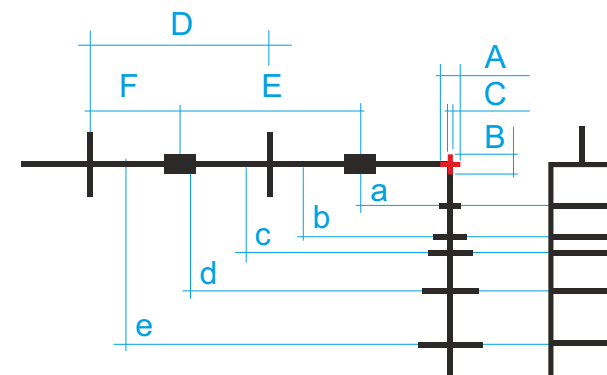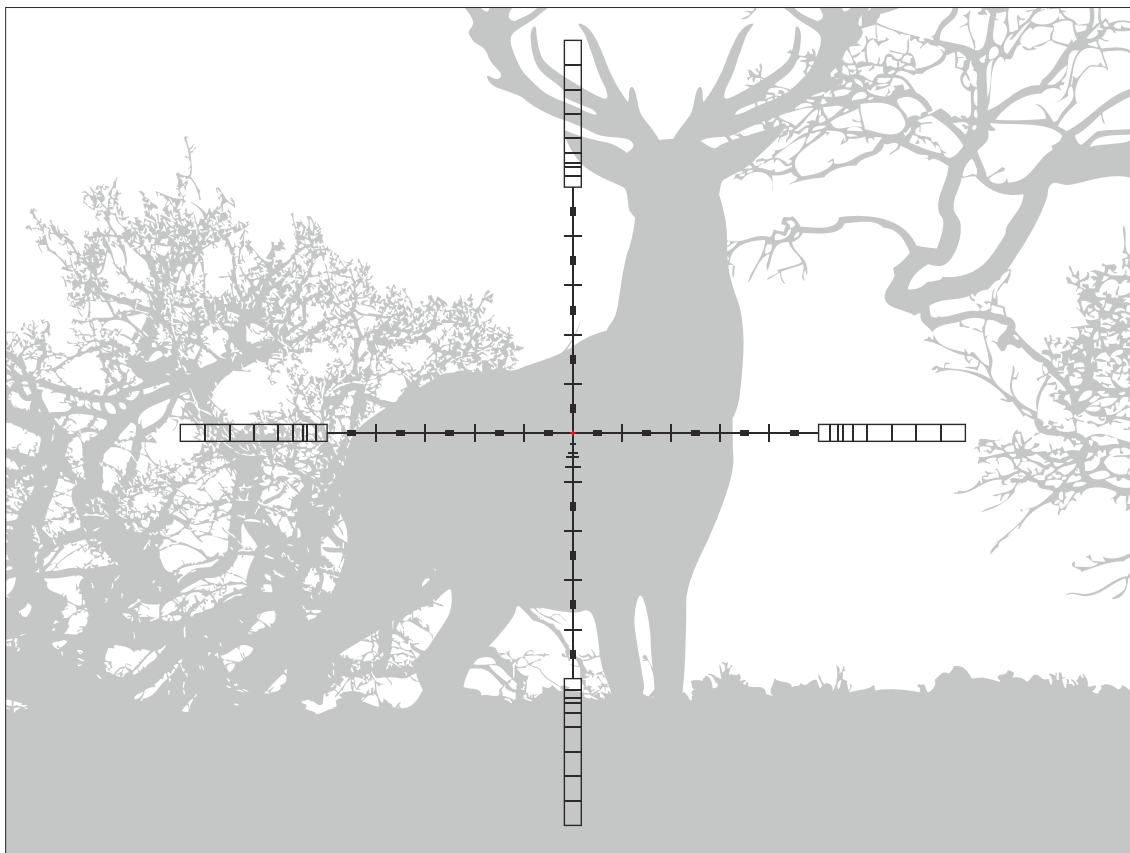


	MOA	cm @ 100 m
Section A	1.8	5.2 on 2.5 x magnification
Section B	1.8	5.2 on 2.5 x magnification
Section C	0.6	1.7 on 2.5 x magnification
Section D	3.5	10 (1 mil) on 10x magnification
Section E	3.5	10 (1 mil) on 10x magnification
Section F	3.5	10 (1 mil) on 5x magnification

Section a	1 mil (10 cm @ 100 m) on 2.5x magnification
Section b	1 mil (10 cm @ 100 m) on 4x magnification
Section c	1 mil (10 cm @ 100 m) on 5x magnification
Section d	1 mil (10 cm @ 100 m) on 7x magnification
Section e	1 mil (10 cm @ 100 m) on 10x magnification


Thermal Imaging Riflescope

TALION XQ35 PRO

X51 Fi-300

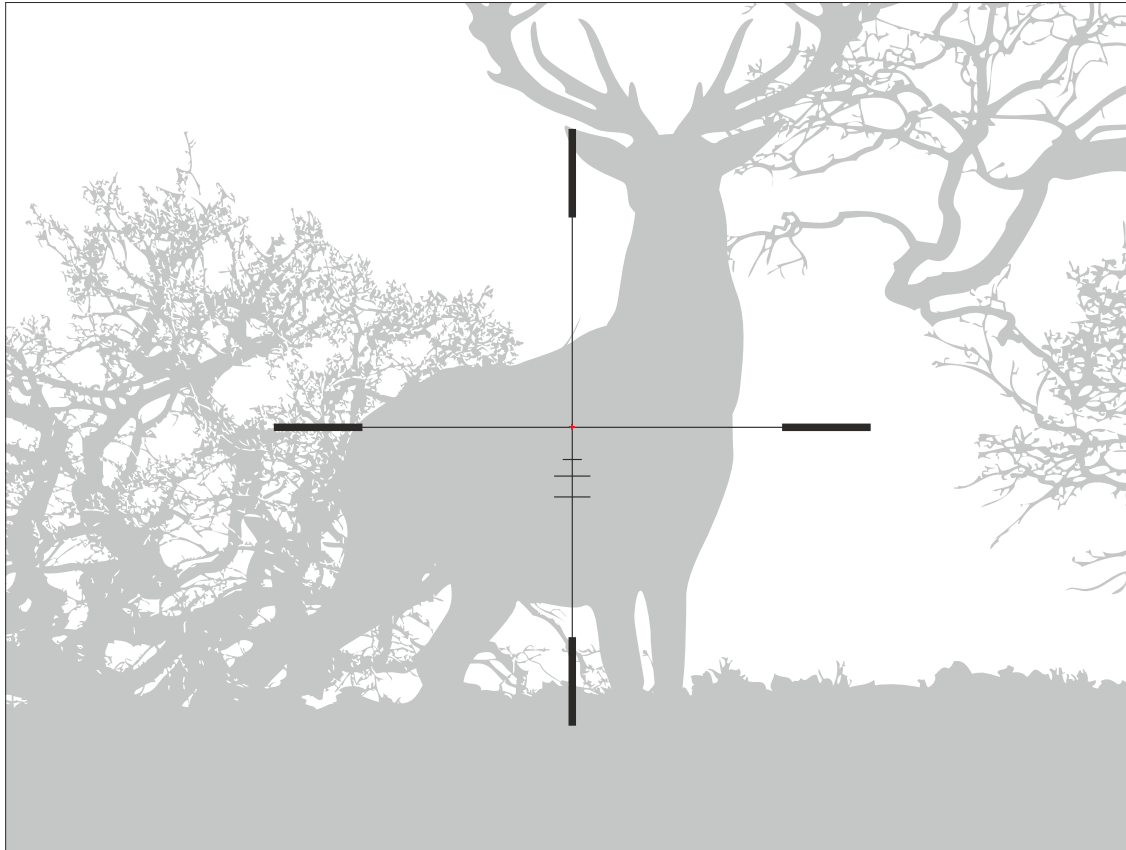

Reticle parameters
(apply to all magnifications)

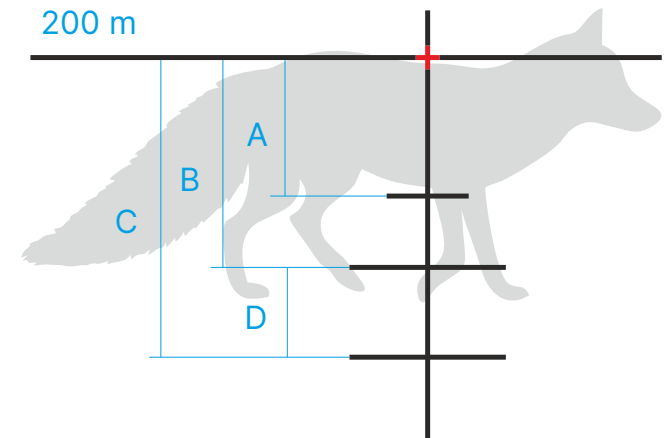


	200 m	300 m
Section A	15 cm (fox body)	23 cm (roe deer body)
Section B	23 cm (roe deer body)	35 cm (wild boar body)
Section C	35 cm (wild boar body)	50 cm (deer body)
Section D	—	15 cm (fox body)


Thermal Imaging Riflescope

TALION XQ35 PRO

M56Fi

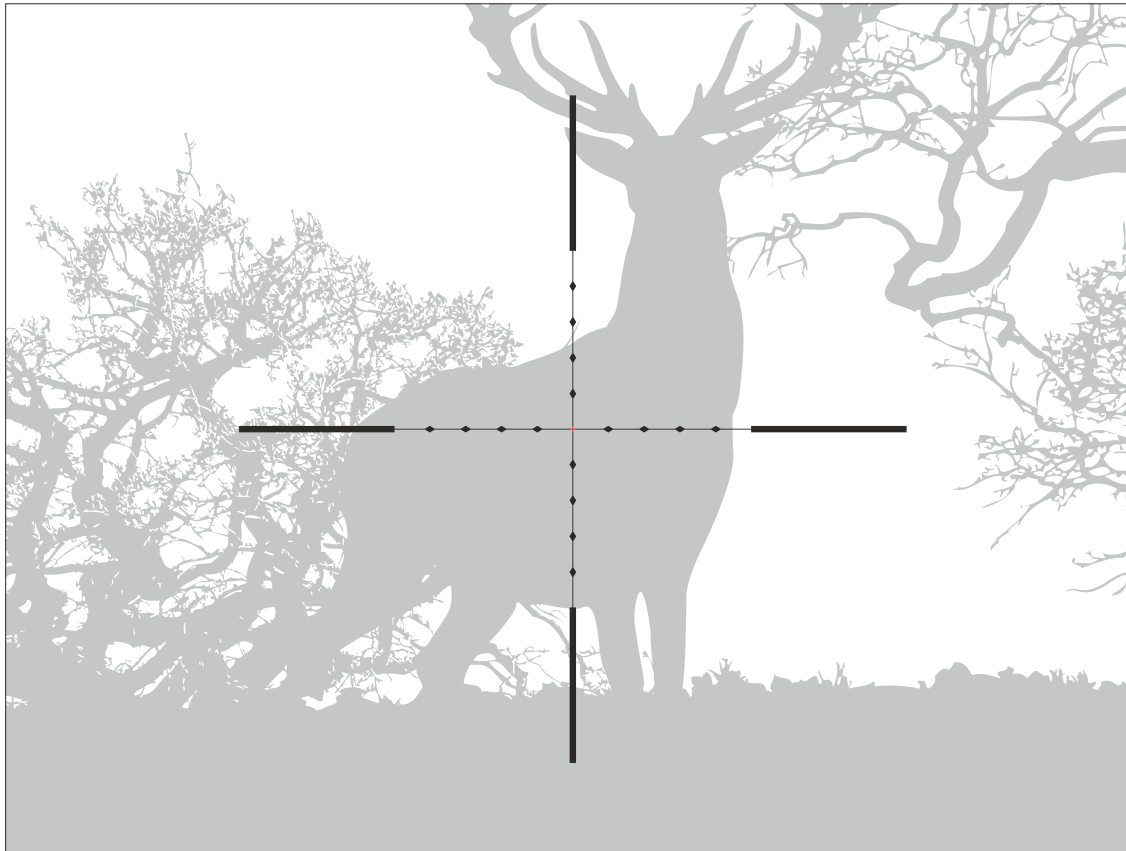SCALABLE


Reticle parameters
(apply to all magnifications)

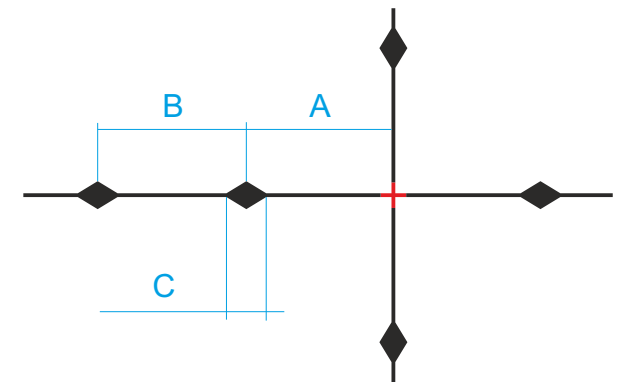


	MOA	CM @ 100 M
Section A	3.5	10 (1 MIL)
Section B	3.5	10 (1 MIL)
Section C	0.86	2.5 (0.25 MIL)


Thermal Imaging Riflescope

TALION XQ35 PRO

↑ TO CONTENT

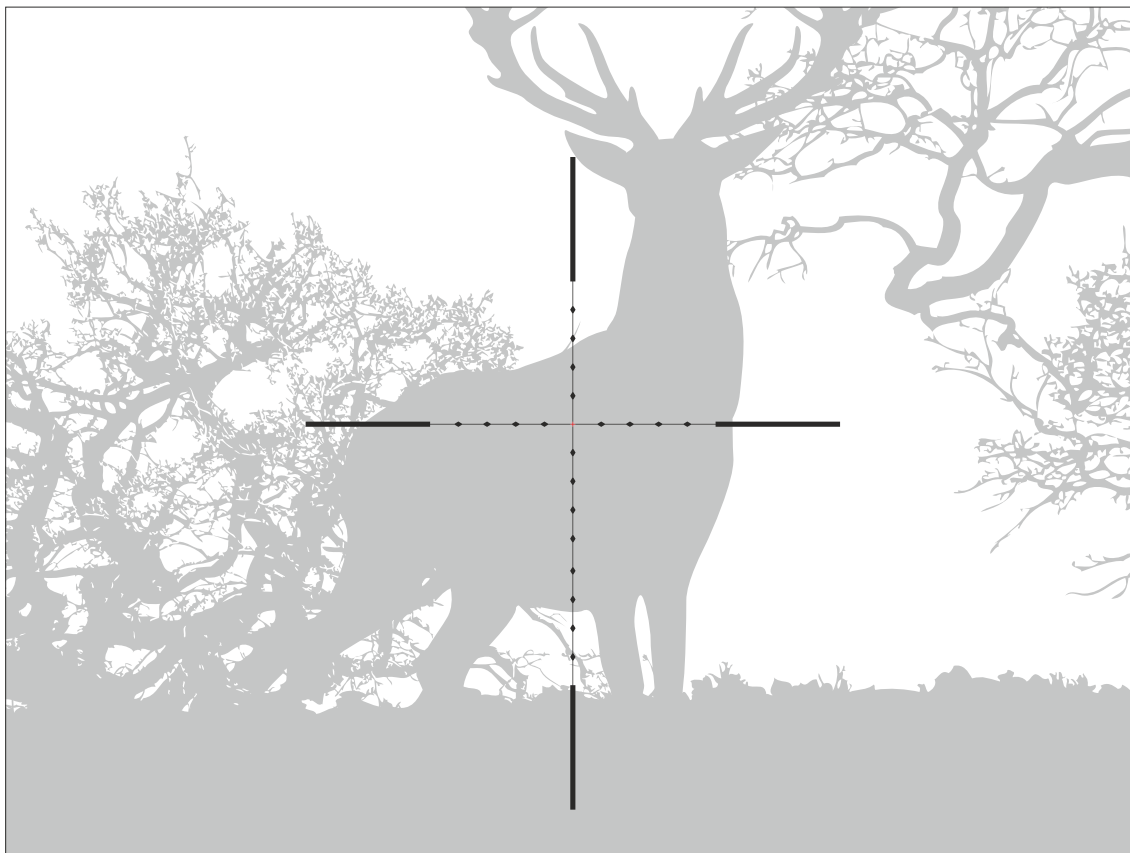

Reticle parameters
(apply to all magnifications)

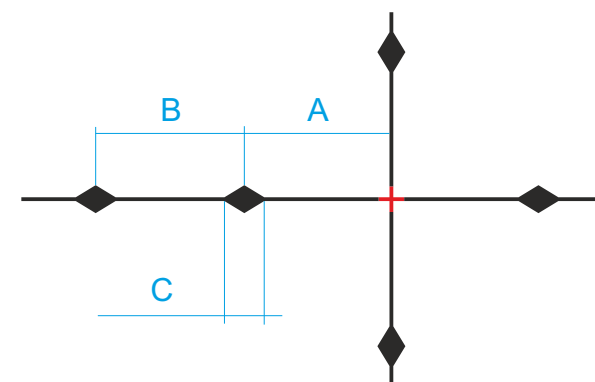

	MOA	CM @ 100 M
Section A	3.5	10 (1 MIL)
Section B	3.5	10 (1 MIL)
Section C	0.86	2.5 (0.25 MIL)

Thermal Imaging Riflescope

TALION XQ35 PRO

↑ TO CONTENT



PULSAR

www.pulsar-vision.com